

 
# USMARTO

## Massage Chair

张展  
2021.03.25  
校对

审核  
2021.03.25  
王华奇

USER MANUAL

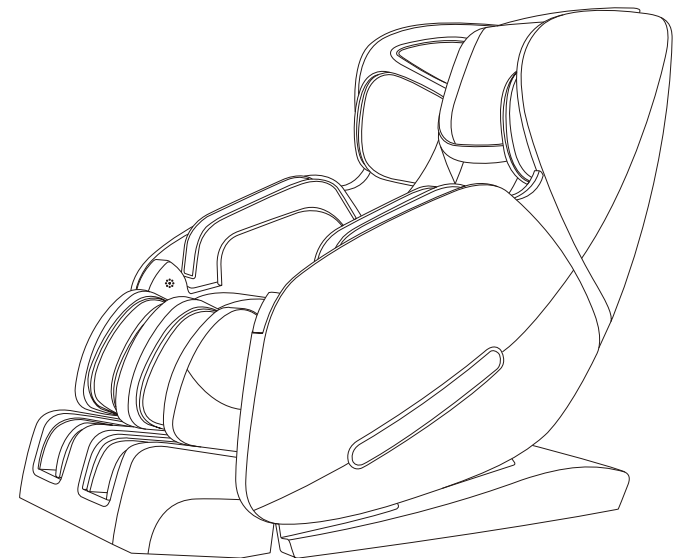

Thank you for choosing our product and your support. In order to understand the directions fully, please read user's manual carefully. And after reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice for further improvement.

## Contents

---

Safety .....	01-06
Components .....	07-10
Outer Structure .....	07
Controller .....	08
Controller Intruction .....	09
Control Display .....	10
Preparation Before Use .....	11-14
Move the Chair .....	11
Place the Chair .....	11
Install Legrest .....	12
Install Backrest Pad and Pillow Pad .....	13
Remote Controller Connector .....	14
Connect power .....	14
Cleaning and Maintenance .....	15
Troubleshoot .....	16
Specifications .....	17

## Safety

---

### IMPORTANT SAFETY INSTRUCTIONS

This massage chair is intended for household only. When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

### DANGER

-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

### WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.  
Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

## Safety

---

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 19) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 20) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operatable.
- 21) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 22) If it is not in use for a long time or after use, please turn off the power and pull out the power plug.
- 23) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.
- 24) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## Safety

---

### SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

#### ● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

#### Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

### IMPORTANT SAFETY INSTRUCTIONS

#### ● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

## Safety

---

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.  
It is not recommended to use the massage for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

#### ● People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical implanted in your body.

## Safety

---

### ● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

### ● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

### ● Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

## Safety

 
---

### ● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



**DANGER** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 100-240V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

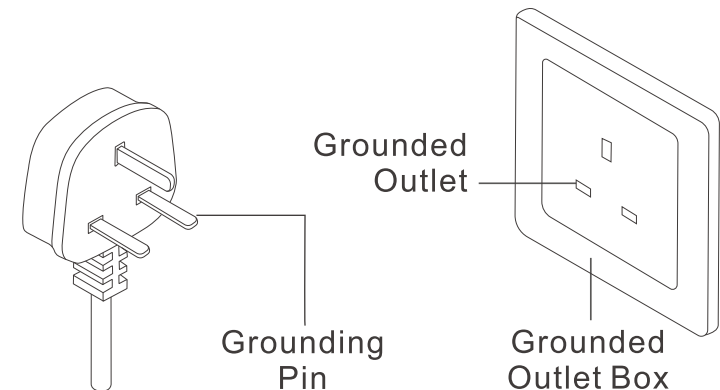

## Components

  
### Outer Structure

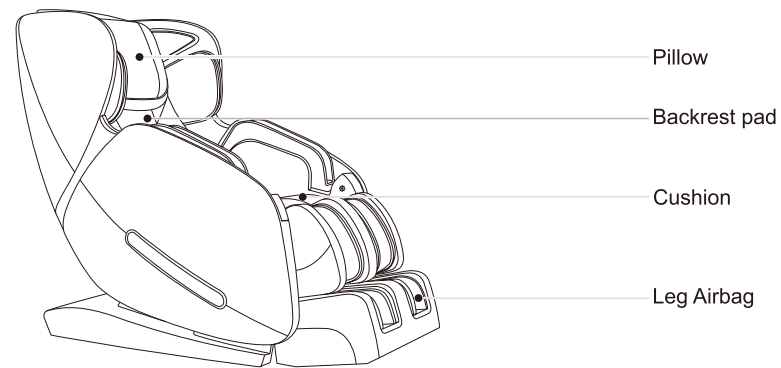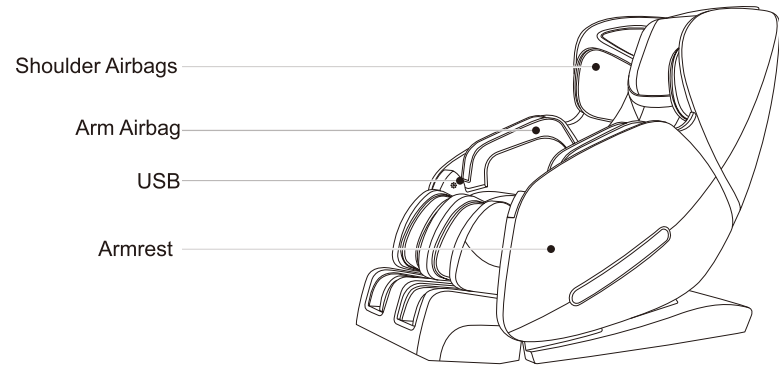

## Components

### Controller

 (The specific display is subject to the actual product.)

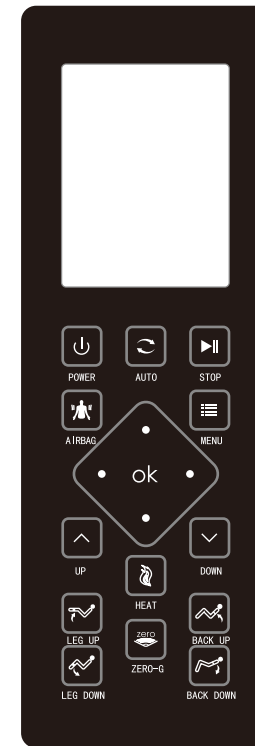












### **⚠ Caution**

- Do not sit, step or place heavy objects on the controller.
- Do not drop the controller. It is recommended that the controller unit be placed in the controller side pocket when not in use.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.

## Components

 
### Controller Instruction

Function	Button	Instruction
Power		Connect the power supply, press this button to start the massage chair. It will start the body diction and then start the default automatic program for massage.
Menu		Press this button to enter the UI interface.
Stop		Press this button to pause the massage function. Press again to resume the original massage function.
Auto		Press this button to switch between multiple automatic program functions. The specific display is subject to the actual product.
4-Way Direction & OK Button		Under the menu UI interface, press the arrow keys to select the corresponding function, press the OK button to confirm the function.
Airbag		Press this button to the airbag menu. Use the 4-way button to adjust and select your desired massage area and intensity.
Heat		Press this button to turn ON/OFF the heating function.
Zero-G		Press the button to recline chair to Zero-G angle. The screen shows the Zero-G icon. If the icon doesn't appear on the screen, the Zero-G function is turned off.
Up/Down		Press the Up/Down button to manually adjust the appropriate shoulder position.
Leg Up/Down		Press the Leg Up/ Down button to adjust the leg angle.
Back Up/Down		Press the Backrest Up/ Down button to adjust the backrest angle.

## Components

### Control Display

(The specific display is subject to the actual product.)

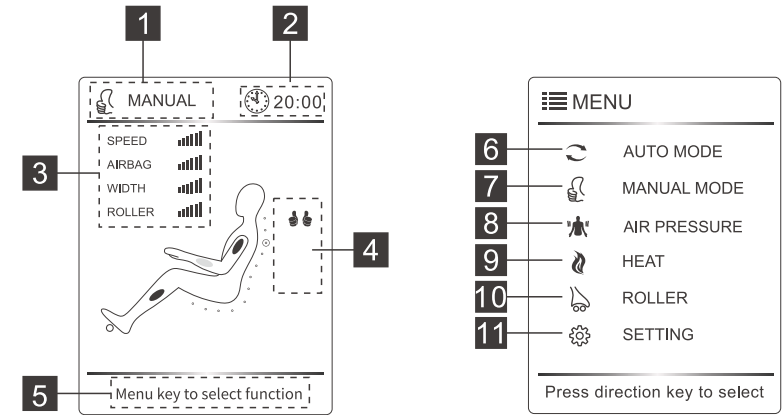


- 1** Message Mode.
- 2** Message Time.
- 3** Message Intensity.
- 4** Message technique and other functions.
- 5** Operation Instruction.
- 6** Can choose a variety of automatic massage procedures for targeted massage (Recommend).
- 7** Can choose a variety of manual massage procedures for targeted massage.
- 8** Can adjust air bag massage part and air bag strength.
- 9** Can choose to turn on or off the heating function.
- 10** Adjustable roller massage speed or turn off this function.
- 11** Can adjust the massage time. Multiple choice of language.



## Preparation Before Use

 
### Move the Chair

- Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

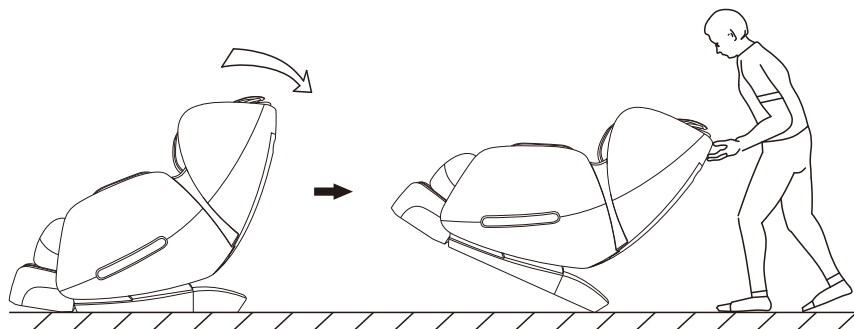

### Place the Chair


 
Please make sure that there is an allowance of more than 5cm behind the massage chair, and more than 35cm in front of the massage chair to allow the backrest to recline without obstruction during operation.

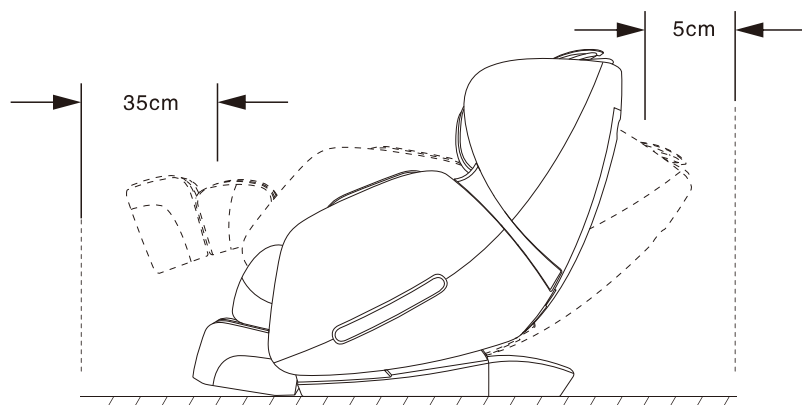



## Preparation Before Use

### Install Legrest

 
 
- As shown in the figure, insert the air tube ① and DC cable ② into the slots.

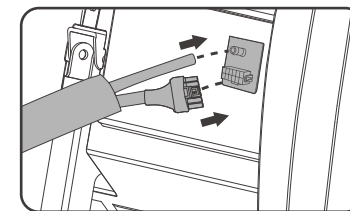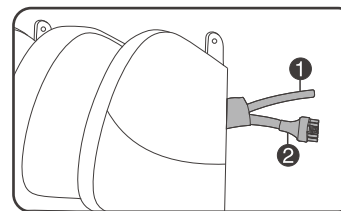

  - As shown in the figure, install the slots ③ of legrest into fixed part ④.

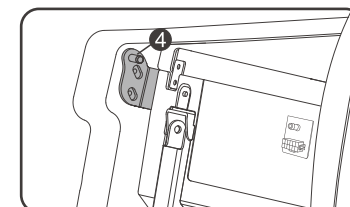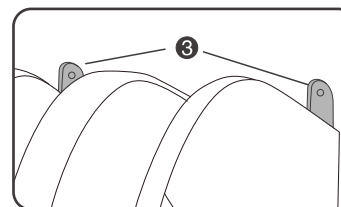

  - As shown in the figure, insert the lock buckle ⑤ into each side, installation finished.

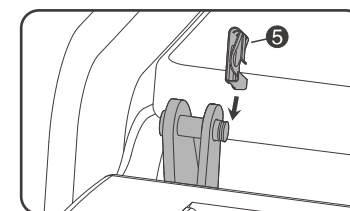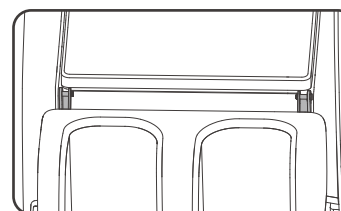




## Preparation Before Use

### Install Backrest Pad and Pillow Pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with velcro.



 
- Attach the left side of backrest pad to backrest with zipper, same as the other side.

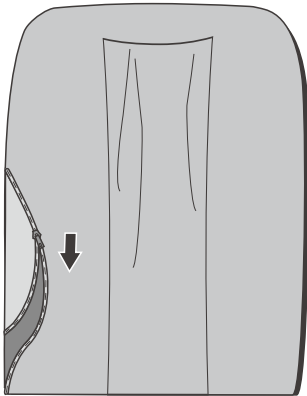

## Preparation Before Use


### Remote Controller Connection

 - Connect the cable of remote controller with the cable under seat.

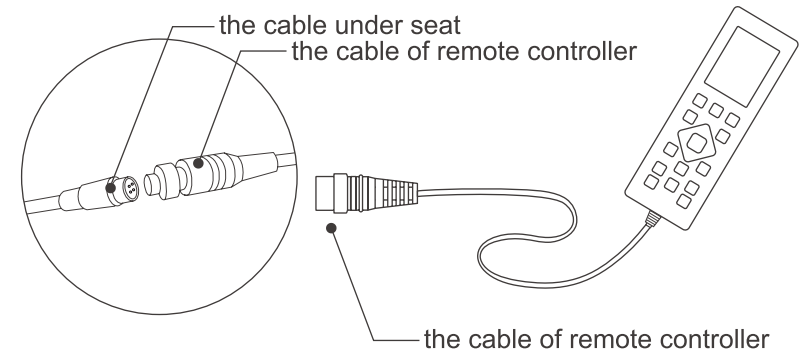

### Connect power

 - Plug the power cord into power inlet, turn on the power switch.

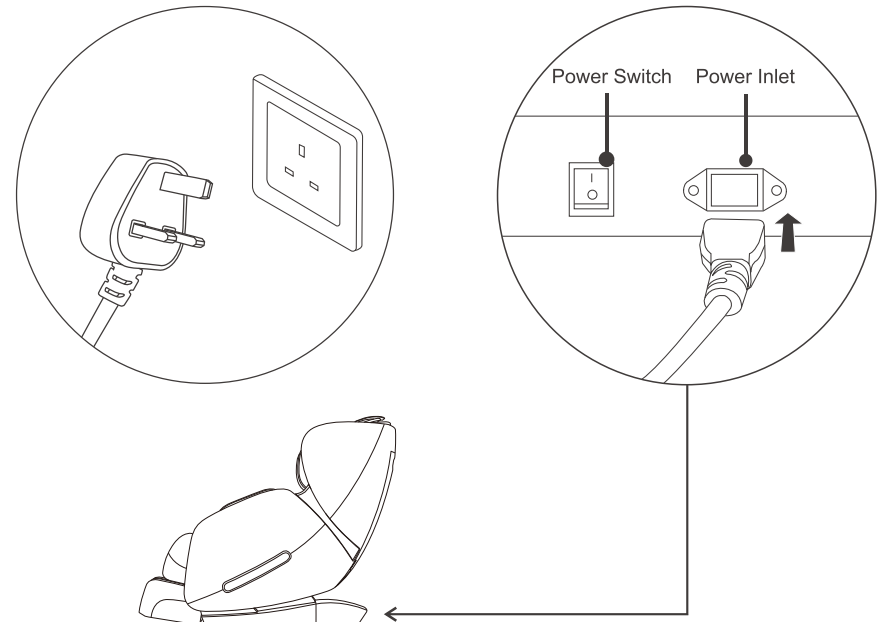

## Cleaning and Maintenance

 
### Maintenance methods

Please follow the below steps to clean leather and plastic parts

- Please ensure the main switch is turn off and the power plug is unplugged from the electrical outlet.
- Dip a soft, dry cloth in water or warm water containing 3% to 5% neutral detergent and wring it thoroughly.
- Clean the leather and plastic parts.
- Then wipe with dry soft cloth.
- Let it dry naturally.

### Warning

- Do not use alcohol, thinner, gasoline and other chemicals for cleaning.
- Do not dry the surface with a blower.
- Do not iron the fabric.
- During maintenance, always unplug the power plug. Do not unplug it by wet hands.
- Please use a dust cover to avoid dust if you won't use the chair for a long time.
- As fabric's color may be dyed on the leather, be careful when using denim and colored cloth to wipe the product.
- Wipe the product with the melamine foam dipped in mild detergent, if the dirt is hard to remove.
- Do not let the leather touch plastic in case of the color fading.
- Water temperature should not exceed 40 degrees.

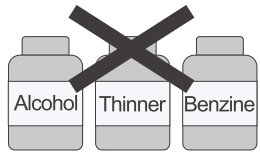

Please do not use



Water temperature should not exceed 40 degrees



Do not iron


## Troubleshoot

 If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or the nearby customer service center.

Problem	Possible cause/action	
The massage rollers move up and then stop.	<ul style="list-style-type: none"> <li>• In order not to affect the body, the automatic timer function will move the massage roller to the upper end when the massage is over .</li> </ul>	Inevitable in structure, not abnormal
Noise during the massage	<ul style="list-style-type: none"> <li>• The sound of clapping;</li> <li>• Friction sound of the massage wheel and fabric during kneading;</li> <li>• The sound of the massage wheel when lifting and kneading;</li> <li>• The sound during air pressure massage;</li> <li>• The sound of the inflator pump;</li> <li>• The sound of airbag exhausting;</li> <li>• The sound of the backrest up and down.</li> </ul>	
The massage rollers will stop during the massage.	<ul style="list-style-type: none"> <li>• If the force applied to the massage rollers is too large, the massage rollers will stop running.</li> <li>• Lift your body slightly when using it, or raise the backrest slightly. (especially those who weigh more than 100kg, please pay attention when using)</li> </ul>	After checking, if there is still an abnormality, please stop using the massage chair immediately.
Press the power button, but the massage chair doesn't work properly or cannot connect to the power.	<ul style="list-style-type: none"> <li>• Please check the following:                             <ol style="list-style-type: none"> <li>1. Is the power plug fully inserted into the socket?</li> <li>2. Is the main power switch on the left rear of the unit turned on?</li> </ol> </li> </ul>	
The power cord and plug are abnormally hot.	<ul style="list-style-type: none"> <li>• Please stop using immediately.</li> </ul>	
		Please contact with your dealer or customer service.
		Do not disassemble or repair it yourself or by non-professionals.

## Specifications

Model	uSmarto
Rated Voltage	100-240V~
Rated Frequency	50-60Hz
Rated Power	140W
Upright position - Approximately	1380(L)×750(W)×1100(H)mm
Reclined position-Approximately	1660(L)×750(W)×980(H)mm

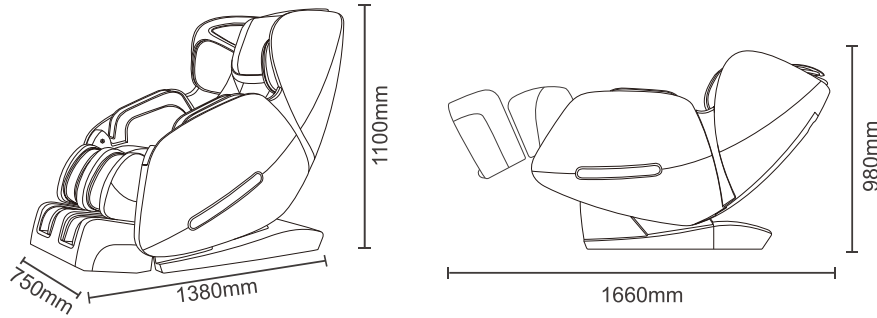

感谢您选购本公司按摩椅，使用前，请您仔细阅读此使用手册，特别是安全注意事项部分，以确保正确操作及使用。阅读后，请妥善保管本使用手册，以便日后查阅。

注：本公司保留对产品及其说明书改进的权利，如有变动恕不另行通知，产品外观以实物为准！

## 安全注意事项

- 安全注意事项 ..... 19-20

## 产品介绍

- 部件名称 ..... 21
- 手控器按键 ..... 22-23
- 手控器显示 ..... 24

## 如何安装使用

- 移动的方法 ..... 25
- 放置场所 ..... 25
- 安装方法 ..... 26-28

## 其他须知

- 产品保养建议 ..... 29
- 常见问题及处理方法 ..... 30
- 产品参数及规格 ..... 31

## 安全注意事项

### 不宜使用本产品的人群

以下人士不可以使用：

- 血栓病(血液病、重度动脉瘤、急性静脉瘤)、各种皮肤病或皮肤感染(包括皮下组织炎症)等。

如有以下症状，请先咨询医生，在医生指导下方可使用：

- 容易受电磁影响而伤害的，体内有植入性医疗器械患者。
- 恶性肿瘤患者。
- 心脏病患者。
- 妊娠或生理周期中的女性。
- 糖尿病、末梢循环障碍患者。
- 知觉障碍者，器具有发热表面，对热不敏感的人使用时必须注意。
- 按摩部位有创伤者。
- 体温超过38°C发烧者，例如：急性炎症（伤寒、高血压）。
- 病重期及身体虚弱者。
- 骨折、急性骨质疼痛患者。
- 肌肉扭伤、肌肉炎症患者。
- 体质不良、感觉身体不适或需要安静者，请谨慎使用。

本产品按摩程序一个循环20分钟，请避免在同一个部位连续按摩。若需继续使用，请间隔30分钟以上，以免过度刺激肌肉或神经系统。

### 使用须知事项

- 本产品仅适用于体重≤120KG的人士使用。
- 请勿在使用按摩椅的同时使用其他治疗仪器。
- 本产品仅限一人使用，请勿两人或两人以上同时使用。
- 使用按摩椅时，请将衣物袋内的贵重物品取出，并取下手臂上的相关饰物以免损伤。
- 使用前请检查确认产品内外部件电源线等是否有松动破损，如有异常请立即停止使用，联系售后进行检查处理。
- 使用过程中，如身体出现异常或感到不适，请立即停止使用并及时咨询医生。
- 启动产品调节角度前请确认前后下方是否有儿童宠物或其他障碍物，避免受伤或机器故障。
- 请勿在木地板、地毯等容易损伤的地面拖拉移动或移动脚轮，移动后轻轻放置以免划伤地板。
- 如发现产品损坏、破裂、漏电及相关部件暴露在外时禁止使用。
- 在使用时发现任何异常情况禁止使用（如冒烟、异味、异响等）。
- 请勿以任何物品遮盖按摩椅的散热装置，以免机器内部温度过高而发生火灾等事故。
- 请勿在饭后或醉酒后立即使用，以免造成不适。
- 请勿在产品仍处于工作状态时，在产品上入睡。
- 请勿让儿童使用或骑乘在按摩椅上玩耍避免夹伤跌落等意外。
- 请勿将手指或其他东西插入产品的缝隙中，以免受伤或发生故障。
- 禁止站立于小腿上或将其他重物挤压在上面。

## 安全注意事项

### 重要安全注意事项

#### ⚠ 安全事项

- 使用前请确认周围没有儿童或宠物，以防当按摩椅启动后靠背和美腿角度调整时，受机器夹缝夹伤等伤害。

- 使用者在使用产品过程中，禁止将手部脚部等放入产品夹缝中以免受伤。

- 请勿使儿童靠近此按摩椅的可活动部分



#### 🚫 禁止湿手

- 请勿在身体潮湿的情况下使用本产品，以免造成触电或机器故障。
- 请勿湿手操作控制器或湿手拔插电源，以免造成触电等危险故障（伤害）。

#### 🚫 禁止潮湿

- 本产品不能放在水中或其他液体里浸泡，请勿放在浴室等潮湿环境中使用和存放，以免发生触电事故或机械故障。
- 请勿使水进入按摩椅内，以免造成触电或按摩椅受损。

#### 🚫 禁止拆卸

- 请勿私自拆卸产品内外部部件，以免造成机器故障、触电、火灾等事故。
- 除本公司指定的维修技术人员之外，绝对不得对产品进行分解拆装维修等作业，如有问题请及时与经销商或公司售后部门联系报备维修。

#### ⚠ 电源安全

 
 
- 请勿使用额定电压以外的电源，以免导致火灾或损坏产品。
- 电源线不要被产品或其他重物挤压，以免破损。
- 请勿损伤、损坏、过分弯曲、牵拉、缠绕、扭转、打结电源线。
- 电源线破损时，请勿私自拆卸更换，请及时联系经销商或有资格的专业人员来更换维修。
- 长期不使用，或者使用完，请关闭电源，并拔出电源插头。

#### 🔌 拔出电源

- 进行清洁保养前，务必关闭电源开关，从插座上拔出电源插头。
- 停电时，请立即切断电源开关，从插座上拔出电源插头。
- 拔电源不可强拉电源线，应捏紧插头轻拔，以免发生意外事故。


## 产品部件名称

### 部位名称

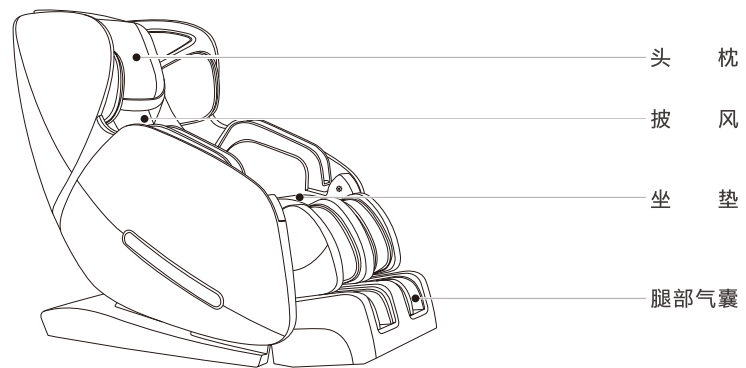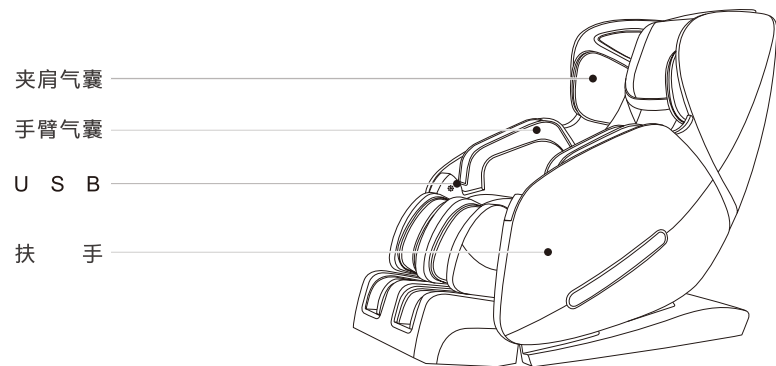

## 手控器

 (注：具体显示以实物为准)

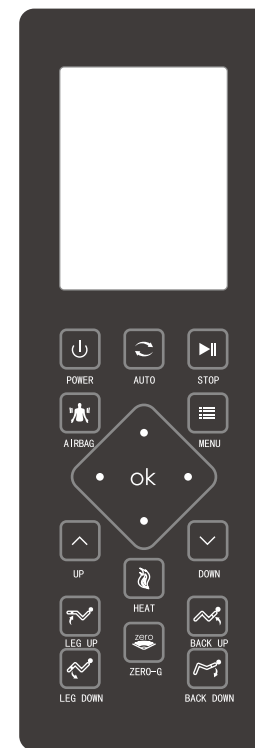

- 请勿将水或其他液体泼洒到按摩椅或手控器上。
- 请勿用湿手进行操作。
- 请勿坐于手控器之上，或摔落，踩踏手控器。
- 请勿用尖锐或坚硬的物体按压触摸面板。

## 手控器

### 手控器功能

功能	图标	说明
电源		在接通电源后，按此键按摩椅开始形体检测，随后启动默认自动程序进行按摩。
菜单		按此键进入菜单UI界面。
暂停		按此键整机全部按摩功能停止，再按此恢复按摩。
全自动		按此键切换多种自动程序功能。具体显示以实物为准。
方向键 OK键		菜单UI界面下，按方向键进行选择相应功能，按OK键确认使用功能。
气囊		按此键进入气囊菜单选项。
加热		按此键开启 / 关闭加热功能。
零重力		每按一次，切换一种零重力模式，共三档零重力模式。
上行 下行		按上行下行手动调节合适的肩位。
腿部升 腿部降		按腿部升，腿部降调节腿部角度。
靠背升 靠背降		按靠背升，靠背降调节靠背角度。

## 手控器

 
(注：具体显示以实物为准)



## 使用前准备


### 移动的方法

- 搬运时，请关闭电源开关，并将电源插头从插座中拔出。
- 先把椅背往下按让后轮着地，然后再移动。
- 为避免损伤地板，请在地板上铺上垫子等物之后再移动按摩椅。

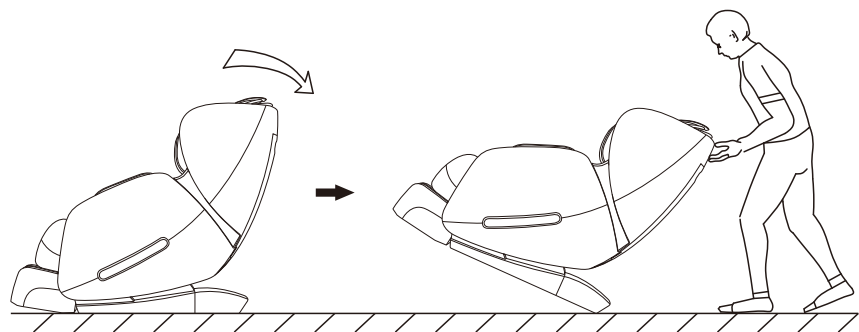

### 放置场所


 
- 请确保按摩椅前留有35cm，后方留有约5cm以上的空间，避免按摩椅倾斜时碰到墙壁或其他物体。
- 按摩椅长时间重压，可能会使地板起伤痕。建议在下方垫一张地毯或其他缓冲介质。

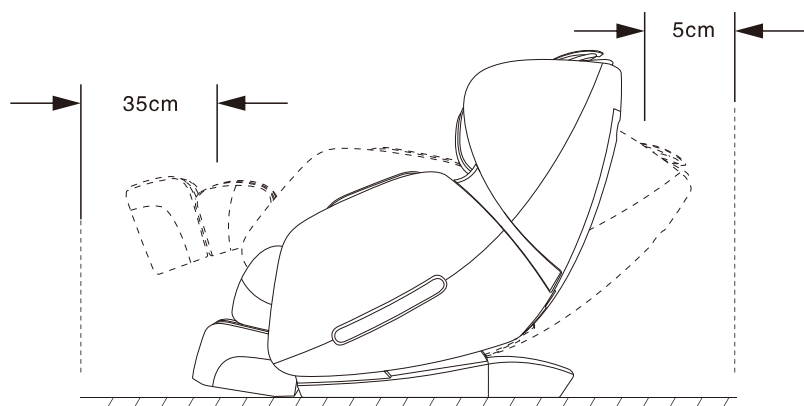



## 使用前准备

### 腿部安装

 
 
- 将腿步气管①，DC线插头②插入。

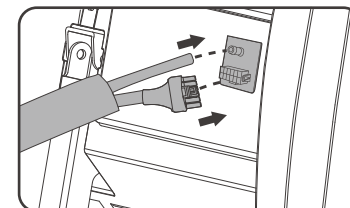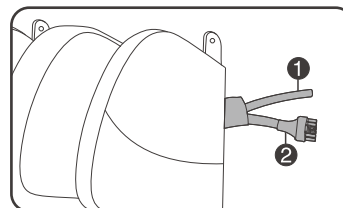

- 腿步挂耳③套装在固定轴④。

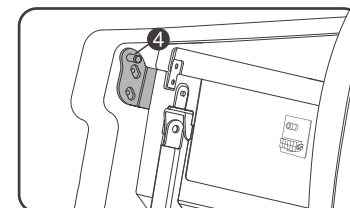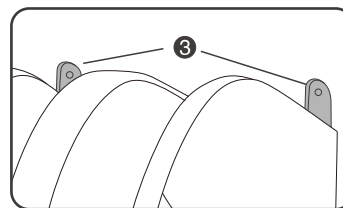  

- 插入档卡⑤安装完成。

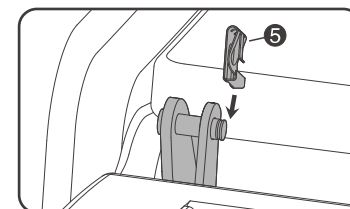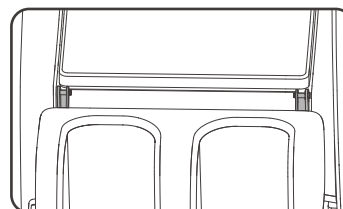  




## 使用前准备

### 靠背垫与头枕安装

- 靠背垫与靠背通过拉链连接。
- 头枕与靠背垫通过魔术贴连接。



 
- 靠背侧边通过拉链连接，另一侧用同样方法连接。

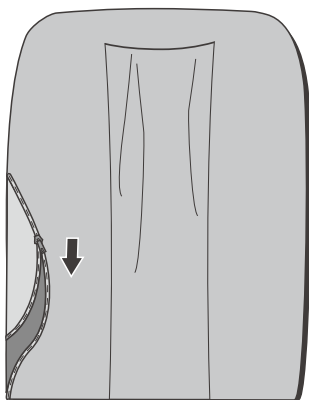

## 使用前准备


### 手控器连接

 - 手控器与座垫底部的连接线对接。

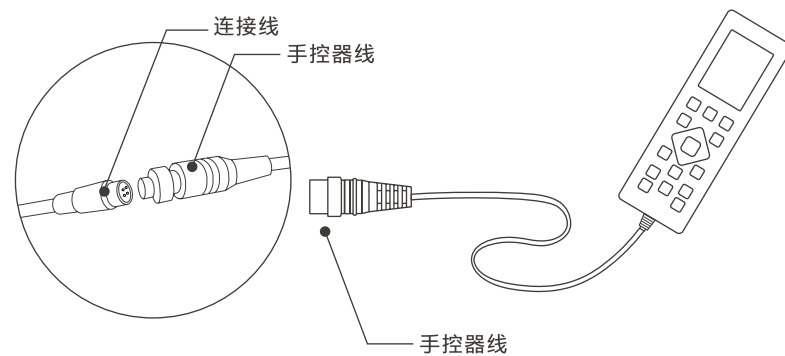

### 连接电源

 - 将电源线插入电源插座，开启电源开关。

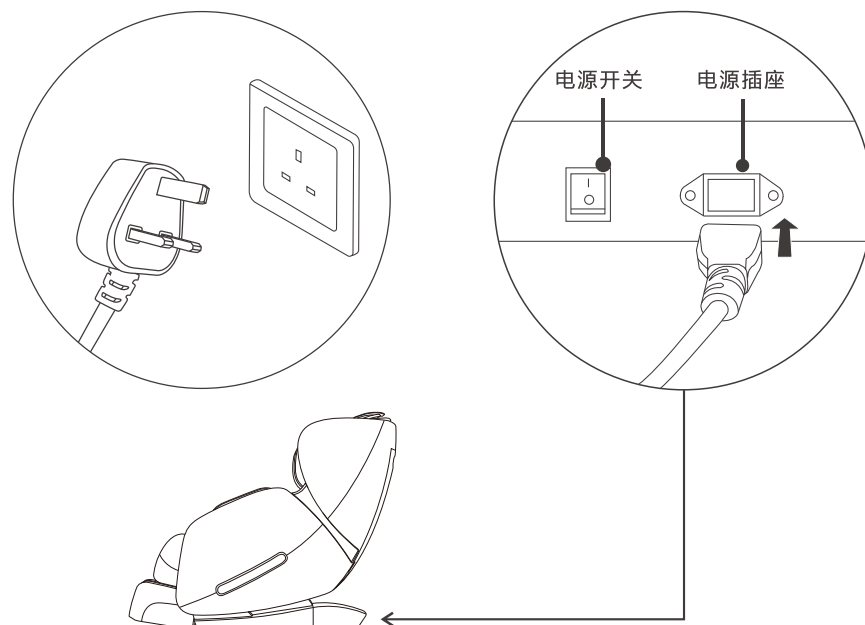

## 产品保养建议

### 日常保养方法

清理皮革、塑料件脏物请按照以下步骤

- 关闭电源，拔出电源插头。
- 将柔软的干布浸入水中或含有3%至5%中性洗涤剂的温水中，然后彻底拧干。
- 擦拭皮革表面、塑料表面脏物。
- 再使用干布擦拭。
- 使其自然风干。

### 日常保养方法

- 请勿使用酒精、稀释剂、汽油等化学品清洗。
- 不要使用吹风机吹干表面。
- 切勿熨烫产品面料。
- 进行保养时，务必要拔下电源插头，请勿湿手拔插。
- 若长时间不用，请用防尘罩（自备），以免蒙上灰尘。
- 由于布料的颜色会染到皮革的表面上，在使用牛仔布和彩色布料擦拭产品务必小心。
- 如果难以去除污渍，则将在市面上购买的三聚氰胺泡棉浸入温和洗涤剂中，然后用它擦拭产品。
- 不要使皮革与塑料接触，导致褪色。
- 水温不能超过40度。



请勿使用



水温不能超过40度



不可以熨烫

## 常见问题及处理方法

进行以下检查后如仍有异常，为防止事故发生，请立即停止使用，并将电源插头从插座上拔出，同时与购买的经销商或者附近的客户服务中心联系。

现象	可能造成的原因	处理方法
按摩机芯向上移动后停止运行	按摩程序结束时，为了不对使用者身体造成影响，自动定时器功能会让按摩机芯行走至导轨顶部后停止工作	无需任何处理
产品运行过程中声响	<ul style="list-style-type: none"> <li>● 机芯工作揉捏、捶打发出的声音</li> <li>● 按摩球工作时与接触面料发出的摩擦声音</li> <li>● 机芯上下行走工作的声音</li> <li>● 气囊按摩充气放气的气压变化的声音</li> <li>● 椅背美腿组件升降的声音</li> </ul>	产品内部构造运行发出的正常分贝噪音，无需处理
无法开机或控制器无法操作	电源插头没有插好或松动	插好电源插头
	底座电源开关未开	将电源开关拨“开”的位置上
	按摩椅保险丝损坏	联系维修更换同型号保险丝
按摩轮停止工作	对按摩轮施力过大，导致按摩轮停止运转	减小对按摩轮的的压力或重新启动
按摩过程中靠背架或美腿无法升降	对背部及小腿施加了过大的压力	减小给背部及美腿施加的压力
电源线及电源插头异常发热	非正常现象需立即关闭电源拔下插头	立即停止使用，联系售后维修处理

切勿擅自对产品进行拆卸维修，如因此造成的产品损坏或人员伤害，本公司概不负责！谢谢合作。

## 产品参数及规格

产品规格可能因性能提升或改善而有所变更，如有变动恕不另行通知

产品型号	uSmarto
额定电压	100-240V~
额定频率	50-60Hz
额定功率	140W
复位尺寸	1380 × 750 × 1100mm (长 × 宽 × 高)
零重力尺寸	1660 × 750 × 980mm (长 × 宽 × 高)

